

CARDIO *Theater*

LCS Troubleshooting Guide

If transmitter has no power:

- a. Check power source.
- b. Make sure transmitter is turned on.
- c. Check AMP 250V slow blow fuse.

If receiver volume cuts in & out:

- a. Check audio levels on transmitter & audio device
- b. Check for loose Jack BD

If there is no sound on one channel only:

- a. Check volume settings on audio device & transmitters.
- b. Make sure audio device is not muted.
- c. Check audio patch cable placement, make sure it is in audio out.
- d. Make sure audio device is powered up.

If receiver is blank:

- a. Check power source "M-111 or CSAFE Cable".
- b. Check headphones.

If receiver has static:

- a. If static is on all channels, program receiver to match transmitters.
- b. If static is on one channel only, check volume settings on audio device and transmitter.

If receiver channels do not match Audio Device:

- a. Set to U.S mode & program Receiver.

